

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING:

Read all instructions before using APPLIANCE.

Keep away from water.

Polythene bags over product or package may be dangerous.

To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER — Do not use this appliance in or near bathtubs, showers or basins or other vessels containing water.



WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Read all instructions before using the appliance.
2. To protect against electrical hazards, do not use while bathing or in the shower.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

4. Do not operate this appliance if the appliance malfunctions or has been dropped or damaged in any manner. Discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. No repairs should be attempted by the consumer.
5. Use appliance only for intended use as described in this instruction book. The use of attachments not recommended or sold by Conair may cause hazards.
6. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
7. Be sure mirror is not in a position where it can reflect sunlight; reflected sunlight can cause fire.
8. Do not use on a soft surface such as a bed, where openings may be blocked.
9. Turn switch to 'O' position before storage.
10. Do not place or store appliance where it can fall or be pulled into a tub or sink.
11. Do not place in or drop into water or other liquids.
12. If an appliance falls into water, do not reach into the water.
13. When the unit is used in a bathroom, remove batteries before use since the proximity of water presents a hazard even when the unit is switched off.

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

Inserting the Batteries

- To insert the batteries, first ensure that the appliance is switched off. Then remove the mirror from the base by turning the mirror clockwise, so that the arrow on the top is pointing to the 'O RELEASE'.
- Gently pull the mirror off and away from the base.
- Remove the battery compartment cover from the back of the mirror by removing the screw. Use a small Philips head screwdriver to remove the screw.
- Align the three AA batteries with the positive and negative positions indicated inside the battery compartment. Carefully insert the negative end of each battery first so it will slip easily into place.
- If you are not going to use your mirror for a long period of time, or if the battery/batteries are dead, remove the batteries from the appliance. Remove used batteries promptly. This will increase the life of your mirror.
- After inserting the batteries, replace the battery compartment cover and the screw, ensuring that the compartment cover is tightly screwed into place.

USING YOUR MIRROR

Your mirror is 2-in-1 for total convenience, so you can use the mirror on its own for easy access to the hidden storage compartment, or it can be secured onto the base and adjusted depending on the viewing angle desired.

To use the mirror on its own:

- Remove the mirror from the base by turning the mirror clockwise, so that the arrow on the top is pointing to the 'O RELEASE'.
- Gently pull the mirror off and away from the base.
- Install the batteries as mentioned above.
- There is a metal stand located on the base of the mirror – pull this out to allow to mirror to stand freely.
- Switch the mirror on by pushing the 'I/O' switch.
- To reattach the mirror to the base, secure the metal stand on the base of the mirror, then simply realign the arrow with the 'O RELEASE' marking and then turn counter clockwise, so that the arrow is aligned with the 'LOCK' marking.

To use the mirror on the base:

- Once the batteries have been installed, simply switch the mirror on by pushing the 'I/O' switch.
- To adjust the viewing height to your desired angle, ensure the mirror is standing on a firm, flat surface, then holding the top of the mirror with

two hands, adjust the mirror head up and down as desired. You should hear it click as it moves through the different angle settings.

Instructions for using Batteries

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace old batteries of a set at the same time.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- Clean the battery compartment by blowing away any debris and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove batteries promptly.

LIFETIME LED LIGHTING

Never have to replace bulbs.
This lighted makeup mirror uses
energysaving lifetime LED bulbs.
Replacement bulbs are not required

USING THE STORAGE COMPARTMENT

To access the hidden storage
compartment, remove the mirror
from the base by turning the mirror
clockwise, so that the arrow on the top
is pointing to the 'O RELEASE'. Gently
pull the mirror off and away from the
base.

Use the storage compartment to hold
hair elastics, clips, lip-balm and your
favourite accessories.

MAINTENANCE

Your lighted mirror is designed
for household use, and is virtually
maintenance free. No lubrication is
needed. If cleaning becomes necessary,
wipe exterior with a damp cloth. Clean
mirror surfaces with a glass cleaner. If
any abnormal condition occurs, turn it
off, allow it to cool, and return it to an
authorized service representative for
repair.

SAFETY WARNINGS

If mirror is not in use, BE SURE DIRECT
SUNLIGHT WILL NOT STRIKE MIRROR
WHEN LEFT UNATTENDED; reflected
sunlight may cause fire.

Allow to cool to room temperature
before storing. Place out of reach of
children, in a cool, dry area where
mirror will not be damaged.

LIMITED ONE YEAR WARRANTY

Our goods come with guarantees that
cannot be excluded under the Australian
Consumer Law. You are entitled to a
replacement or refund for a major failure
and for compensation for any other
reasonably foreseeable loss or damage.
You are also entitled to have the goods
repaired or replaced if the goods fail to
be of acceptable quality and the failure
does not amount to a major failure.
In New Zealand our goods come with
a guarantee that cannot be excluded
under the Consumer Guarantee Act
1993.

Conair Australia Pty Ltd. will repair or
replace (at our option) your appliance
free of charge for twelve months from
the date of purchase if the appliance is
defective in workmanship or materials.
This warranty is an additional benefit
and does not affect your legal rights. To
obtain service under this warranty, please
read the Warranty Leaflet included or
contact Conair Customer Service at
aus_info@conair.com.

To make a warranty claim you must
retain your proof of purchase.

true glow

Soft halo lighting for a gentle glow



CONAIR®

©2016 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Customer Service Hotline
Australia: 1800 650 263
New Zealand: 0800 266 247
E-mail: aus_info@conair.com

www.conairaustralia.com.au

CBE614A

CONAIR®

CBE614A