IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE PEDICURE CALLUS REMOVER

- Close supervision is required when this product is used on, by or near children or people with certain disabilities.
- Use product only for its intended use as described in this instruction booklet. Do not use attachments not recommended by the manufacturer.
- 3. Keep the unit away from heated surfaces.
- 4. Never use while sleeping.
- Do not use outdoors or where oxygen is being administered or where aerosol (spray) products are being used.
- 6. Never operate if the product is damaged.
- 7. This product is not applicable to children.

SENSITIVITY AND CAUTIONS SPECIAL CAUTIONS FOR DELICATE AREAS

The True Glow® Pedicure Callus Remover is a footsmoothing device that is intended to help you achieve softer, healthy-looking skin. The True Glow® Pedicure Callus Remover is not a medical device and is not intended to be used to treat any medical conditions.

If you are under a doctor's care for any skin condition or if you think you have very sensitive skin, please consult your physician before use.

We recommend not sharing the callus remover heads; each user should have their own.

Do not use with exfoliation creams with rough or jagged particles.


If you experience any pain or discomfort during use, stop using and consult your physician.

Do not apply pressure to feet when using callus remover; let the rotation perform the exfoliation.

When finished, rinse feet with water and dry with a clean

TRUE GLOW CALLUS REMOVER FEATURES



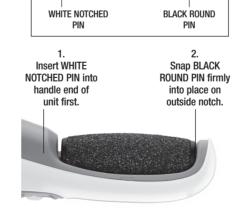

COARSE CALLUS REMOVER

OPERATING INSTRUCTIONS

NOTE: The True Glow® Pedicure Callus Remover operates on 3 AAA batteries (not included).

- Remove the battery cover from the unit.
- Install 3 AAA batteries (not included) as per the markings in the battery compartment.
- 3. Slide the battery cover back onto the unit until the battery door is firmly closed.
- 4. Select the desired attachment and push it down onto the mounting post until firmly in place.

STARTING THE PEDICURE CALLUS REMOVER Slide the ON/OFF button up to turn on the unit.

STOPPING THE PEDICURE CALLUS REMOVER
Slide the on/off button down to turn off the unit.

BATTERY WARNING

- Always purchase the correct size and grade of battery most suitable for the intended use.
- 2. Replace all batteries of a set at the same time.
- 3. Clean the battery contacts and also those of the device prior to battery installation.
- 4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
- 5. Remove batteries from equipment which is not to be used for an extended period of time.
- 6. Remove used batteries promptly.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

INSTRUCTIONS FOR USING THE PEDICURE CALLUS REMOVER

- 1. Select attachment and attach to power handle.
- 2. Turn the callus remover ON.
- Do not press the callus remover hard against your skin, as it will reduce the motion and effectiveness. Keep the callus remover in light contact and flush against the skin.
- Move the callus remover in a slow, back-andforth motion around your feet. Let the rotation do the exfoliating.
- 5. When finished, rinse your feet with water and dry with a towel

USER MAINTENANCE INSTRUCTIONS

- 1. After each use, clean the callus remover handle with a damp cloth to remove any residue.
- Clean unit thoroughly each week to help remove residue, wipe with a dry cloth and store unit in its box or in a clean, dry place.
- Remove callus remover heads once a week and rinse under warm, soapy water to remove residue accumulated during treatment. Allow callus remover heads to air-dry. Store in a clean, dry place.
- 4. Do not use abrasive cleaners for cleaning.
- 5. Do not put unit in dishwasher for cleaning.
- When storing the callus remover off the unit, use the protective cover.

Note: It is recommended to replace the callus remover attachment every 60 days, as they wear over time and lose their efficacy.

To buy an additional callus remover attachment, please call Conair Customer Service on 1800 650 263 (in Australia) or 0800 266 247 (in New Zealand).

TROUBLESHOOTING GUIDE

THE CALLUS REMOVER IS NOT WORKING.	Make sure the contacts on the unit and base are clean. See User Maintenance Instructions for cleaning procedure. Make sure the batteries are installed properly
THE CALLUS REMOVER OPERATES AT A SLOW SPEED.	Replace the batteries.
THE CALLUS REMOVER VIBRATES OR FALLS OFF DURING USE.	Make sure the callus remover head is snapped on properly. Replace the callus remover head.

LIMITED ONE YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twelve months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, contact Conair Customer Service at aus info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Footcare Solution for Professional Results



©2016 Conair Australia Pty Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia
Customer Service Hotline Australia: 1800 650 263
New Zealand: 0800 266 247
E-mail us at: aus_info@conair.com
www.conairaustralia.com.au

IB-16/307