

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING USER INSTRUCTIONS FOR THE SONIC BRUSH

1. Close supervision is required when this product is used on, by or near children or people with certain disabilities.
2. Use product only for its intended use as described in this instruction booklet. Do not use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleepy or drowsy.
5. Do not use outdoors or where oxygen is being administered.
6. Never operate if the product is damaged.
7. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water.
8. Do not place or store the charging base where it can fall or be pulled into a tub or sink.
9. Do not immerse charging base in water or any other liquid.
10. If charging base falls into water or another liquid, unplug immediately.
11. Use only with Conair supplied power adapter model CA53.

SENSITIVITY AND CAUTIONS SPECIAL CAUTIONS FOR DELICATE AREAS

The True Glow Sonic Skincare Brush is a face, body and feet cleansing device that is intended to help you get clean and healthy-looking skin. The True Glow Sonic Skincare Brush is not a medical device and is not intended to be used to treat any medical conditions such as acne.

If you are under a doctor's care for any skin condition or if you think you have very sensitive skin, please consult your physician before use.

We recommend starting on the LOW setting and slowly increasing speed depending on how your skin reacts to treatment. If rash or irritation occurs, stop use.

We recommend not sharing the brush heads; each user should have their own brush head.


Do not use with exfoliation creams with rough or jagged particles.

Removing makeup can cause the brush head to discolor. This will not affect performance and the brush head can be used for the entire recommended life of 90 days.

If you experience any pain or discomfort during use, stop using and consult your physician.

Moisten your skin and apply cleanser. Also apply a small amount of cleanser to the moistened brush head. Do not apply pressure with the brush to the skin; let the sonic oscillation perform the cleansing. When finished, rinse with water and dry skin with a clean towel.

TRUE GLOW SONIC BRUSH FEATURES

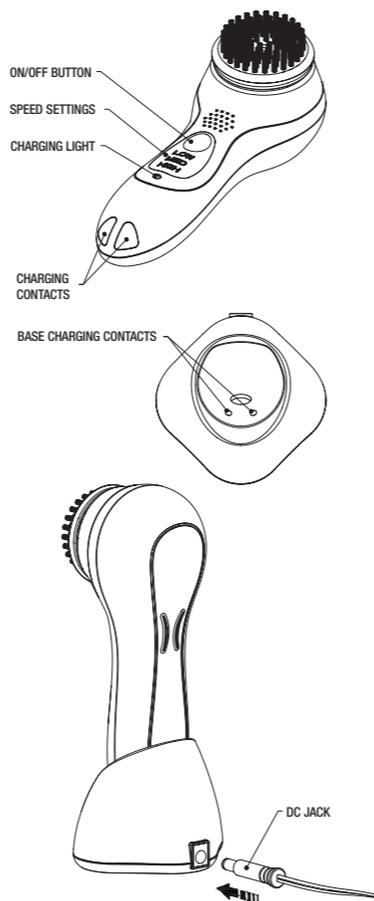

THREE SPEED OPTIONS

The three speeds available on your True Glow Sonic Skincare Brush allow you to customize your cleaning routine to suit your individual needs.

ATTACHMENTS

NORMAL SKIN: white and pink bristles.
BODY: Larger brush size with white and green bristles.
SENSITIVE SKIN: White and blue bristles.

PEDICURE BRUSH ATTACHMENTS

COARSE CALLUS SOFTENER: Smooths away rough dry areas around the heel. Rough exfoliating disk with a white plastic back.

FINE CALLUS SOFTENER (Callus Polisher): Polishes and softens skin. Smooth exfoliating disk with a white plastic back.

FOOT CLEANSING BRUSH: To thoroughly exfoliate and buff dry, cracked feet leaving skin feeling softer and smoother. Large brush size with white bristle and white plastic back



Note: Your True Glow Sonic Brush may only include certain attachments. Note: For optimal performance, it is recommended to replace the brush attachment every 3 months. For replacement brushes call Conair Customer Service 1800-650-263



TIMER

Timer allows consistent treatment on your feet with a beep after 90 seconds indicating to move to your other foot. At 3 minutes the unit will beep once and the unit will shut off. The unit also safely shuts off in 3 minutes.

WATER RESISTANT

The True Glow Sonic Skincare Brush is water resistant and can be used in the shower. Do not fully immerse the unit into water.

RECHARGEABLE

The True Glow Sonic Brush is cordless and requires a full charge before use. After unit is fully charged, it can provide up to 35 minutes of use without recharging.

CHARGING THE SONIC SKINCARE BRUSH

1. Before using the sonic brush for the first time, **it must be fully charged for 16 hours.** Plug the power adapter into a wall outlet and plug the DC jack into the back of the charger base. Place the sonic cleaning brush into the base and be sure the red LED lights, indicating that the unit is charging.
2. The charging indicator under the control panel will illuminate RED during charging. Once fully charged, the light will illuminate GREEN. Always check to ensure that the charging light illuminates when you place the sonic brush in the charging stand.
3. The RED light will start flashing when the unit reaches low battery capacity during operation.
4. The adapter may become warm while charging; this is normal operation.
5. In order to maintain the optimum capacity of the rechargeable batteries, the sonic brush should be given a full 14-hour continuous charge every 3 months.
6. Unplug the adapter from the wall and the base when not in use. Do not unplug the adapter from the wall when it is still connected to the unit. This will cause the battery to discharge

STARTING THE SONIC SKINCARE BRUSH AND SELECTING THE SPEEDS

Press the ON/OFF button 1 time for HIGH setting, 2 times for MEDIUM setting and 3 times for LOW setting. The speed setting will illuminate, indicating the setting on the control panel.

AUTOMATIC 2-ZONE CLEANSING PEDICURE CYCLE

Once the sonic brush is started, it will beep every 90 seconds to change to opposite foot. It will shut off at 3 minutes after completing the cycle. You can change speeds during the cycle by pressing the ON/OFF button until you get to desired setting.


STOPPING THE SONIC SKINCARE BRUSH

At any time the sonic brush can be stopped by pressing and holding the ON/OFF button for 1 second.

ATTACHING AND REMOVING YOUR BRUSH HEAD

To attach the brush, hold the brush by the rim and press over mounting post until it firmly snaps into place. To remove, hold the rim and pull off.

6 FACIAL cleaning zones

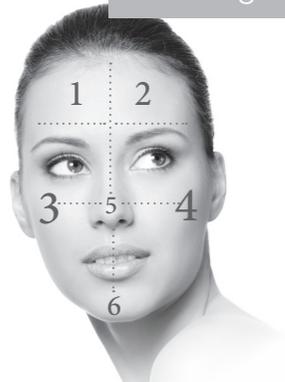

NOTE: 10 SECONDS AT EACH LOCATION

2 PEDICURE cleaning zones



NOTE: 90 SECONDS AT EACH ZONE
1 CYCLE = 3 MINUTES

OPERATING INSTRUCTIONS

1. Wet your face and apply sufficient cleanser. Also apply a small amount of cleanser to the wet brush head.
2. **STARTING THE SONIC BRUSH AND SELECTING THE SPEEDS**
Press the ON/OFF button 1 time for HIGH setting, 2 times for medium setting and 3 times for low setting. The speed setting will illuminate, indicating the setting on the control panel.
3. **Do not press the brush hard against your skin as it will reduce the motion and effectiveness.** Keep the brush in light contact and flush against the skin.
4. Move the brush in a slow circular motion around your face. Let the sonic oscillation do the cleansing. **NOTE: Do not apply treatment close to the eyes to avoid risk of injury.**
5. When finished, rinse with water and dry your skin with a towel.

USER MAINTENANCE INSTRUCTIONS

CARING FOR YOUR TRUE GLOW SONIC SKINCARE BRUSH

1. After each use, wipe the brush handle with a damp cloth to remove any oils or lotions used during treatment. Be sure you keep the charging contacts on the sonic brush clean to keep the unit charging properly.
2. Once a week unplug the DC jack and clean the charger base to prevent buildup of oils and lotions. The 2 pin contacts must be clean for the unit to charge properly.
3. Clean unit thoroughly each week by rinsing under warm soapy water to help remove oil and lotion buildup, wipe with a dry cloth and store unit in its box or in a clean, dry place.
4. Remove brush heads once a week and rinse under warm soapy water to remove residue accumulated during treatment. Allow brush heads to air dry. Store in a clean, dry place.
5. Do not use abrasive cleaners for cleaning.
6. Do not put unit in dishwasher for cleaning.
7. When storing the brush off the unit, use the protective cover. This will prevent the bristles from deforming.

Note: It is recommended to replace the brush attachments every 90 days, as the bristles wear over time and lose their efficacy. For replacement brushes call Conair Customer Service 1800-650-263

TROUBLE SHOOTING GUIDE

<p>THE SONIC BRUSH IS NOT CHARGING. NO RED CHARGING LIGHT.</p> <p>THE CHARGING LIGHT DOES NOT CHANGE TO GREEN.</p>	<ol style="list-style-type: none"> 1. Make sure the contacts on the unit and base are clean. See user-maintenance instructions for cleaning procedure. 2. Make sure the adapter and DC jack are plugged in properly. 3. Check the outlet and make sure the power is on. Most bathroom outlets have a test and reset button. Press the reset button and recheck the outlet.
<p>THE SONIC BRUSH WILL NOT TURN OFF.</p>	<p>You must hold the ON/OFF button for more than 1 second to turn the unit off.</p>
<p>THE BRUSH HEAD VIBRATES OR FALLS OFF DURING USE.</p>	<ol style="list-style-type: none"> 1. Make sure the brush head is snapped on properly. 2. Replace the brush head.

LIMITED ONE YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twelve months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com. To make a warranty claim you must retain your proof of purchase.



©2016 Conair Australia Pty Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia
Customer Service Hotline Australia: 1800 650 263
New Zealand: 0800 266 247
E-mail us at: aus_info@conair.com
www.conairaustralia.com.au

true glow

Sonic Skincare Solution
Face - Body - Feet



IB-15/531

CSFB1A