

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING AN ELECTRIC FURNISHING, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING APPLIANCE. KEEP AWAY FROM WATER.

DANGER

TO REDUCE THE RISK OF ELECTRIC SHOCK: ALWAYS UNPLUG THIS APPLIANCE FROM THE ELECTRICAL OUTLET BEFORE CLEANING.

WARNING — TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by or near children or individuals with certain disabilities.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.

7. Do not use outdoors.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. To disconnect, turn all controls to the OFF position, then remove plug from outlet.
10. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair and the like.
11. To protect against electrical hazards, do not use while bathing or in the shower.
12. Be sure mirror is not in a position where it can reflect sunlight; reflected sunlight can cause a fire.
13. Do not use on a soft surface, such as a bed, where openings may be blocked.
14. Turn mirror OFF, allow the unit to cool and unplug cord before storage or cleaning.
15. Do not place or store this furnishing where it can fall or be pulled into a tub or sink.
16. If this furnishing falls into water, unplug it immediately. Do not reach into the water.
17. Do not leave appliance unattended when it is plugged in.
18. This appliance is not toy. Keep away from children.
19. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.


FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS



CAUTION: BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MAGNIFYING SIDE OF MIRROR WHEN LEFT UNATTENDED; REFLECTED SUNLIGHT CAN CAUSE FIRE.

1. The mirror can only be operated with the adapter. Plug the adapter into any standard wall outlet.
2. Quickly press switch cap to control light in the 1x mirror frame. One press for low setting, two for medium setting, and three for high. A fourth press will turn off the light. You can have both the mirror frame light and the white mood light at base on at the same time.
3. Press and hold switch cap for 1½ to 3 seconds to control white mood light in base. Press once and hold to turn light on, press twice and hold for gentle pulsating mode; press and hold for 3 seconds to turn off the light.
4. Long press on the switch for more than 3 seconds can turn off all lights at the same time.

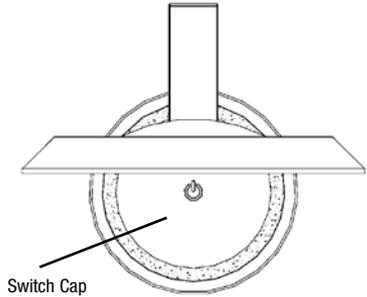

Press 1 time for low setting, 2 times for medium setting, 3 times for high setting, 4 times to turn off.

Press and hold switch cap for 1½ to 3 seconds for mood light on base. Press and hold 1 time for on, press 2 times and hold for pulsating mode; press and hold for 3 seconds to turn off.

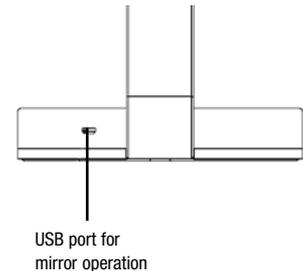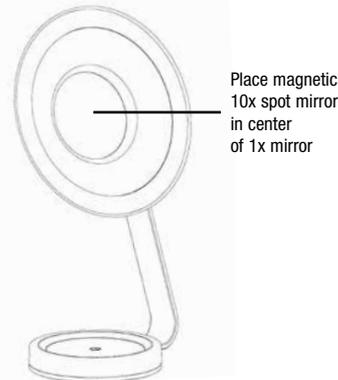

SPECIAL FEATURE

This lighted makeup mirror uses energy-saving, lifetime LED bulbs. Replacement bulbs are not required.

STORAGE

Disconnect from electrical outlet. BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MAGNIFYING SIDE OF MIRROR WHEN LEFT UNATTENDED; REFLECTED SUNLIGHT CAN CAUSE FIRE. Allow to cool to room temperature before storing. Place in a cool, dry area out of reach of children, where it will not be damaged.

MAINTENANCE

Your lighted mirror is designed for household use and is virtually maintenance free. No lubrication is needed. If cleaning becomes necessary, disconnect the appliance from the power source and wipe exterior with a cloth. Clean mirror surfaces with a glass cleaner. Do not light until you are certain mirror is completely dry to protect against electrical hazards.

If any abnormal condition occurs, unplug the lighted mirror, allow it to cool, and return it to an authorized service center for repair.

Handle cord carefully for longer life; do not jerk or strain at plug connections, or wrap cord around mirror for storage. This could cause damage to the cord and the mirror could short circuit. To store mirror, coil cord loosely.

**WARNING:
IF YOU THINK
THE POWER IS
OFF WHEN THE
SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everybody knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED ONE YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twelve months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Conair Customer Service at aus_info@conair.com. To make a warranty claim you must retain your proof of purchase.

CONAIR®

©2018 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Customer Service Hotline
Australia: 1800 650 263
New Zealand: 0800 266 247
E-mail: aus_info@conair.com
www.conairaustralia.com.au

IB-17/546

Illuminations

LED LIGHTED MIRROR



body benefits®
by CONAIR®

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Model CBEMLRGA