

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING AN ELECTRIC FURNISHING, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING APPLIANCE. KEEP AWAY FROM WATER.

1. Read all instructions before using the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This product contains extremely sharp blades keep it stored away from children.
4. Close supervision is necessary when any appliance is used by or near children or invalids.
5. Use appliance only for its intended use as described in this instruction book.
6. This appliance is not a toy. Keep away from children.

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS


1. Put the item you want to treat on an even surface.
2. Turn the distance ring to the appropriate position or remove the ring entirely depending on the distance required.
3. Switch the unit ON.
4. Without applying pressure, run the shaver head lightly over the parts you wish to remove the lint from. Lint will accumulate in the lint collector.
5. After use, switch the unit OFF.

IMPORTANT: Empty the lint collector regularly and before it becomes overfilled, which can cause the unit to slow down or stop. If unit slows or stops, check and empty lint collector prior to replacing the batteries.

DO NOT USE ON DAMP TEXTILES!

The lint remover might damage structured textiles or very soft materials such as Angora wool. Always test on an area that is not visible on the item you want to treat. In testing, set the distance ring to the highest level.

REMOVING AND FITTING THE DISTANCE RING

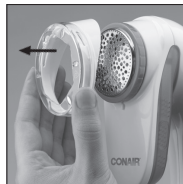

TO REMOVE: Grasp both sides of the ring and pull it off the unit in the direction of the arrow.



TO FIT: Push the distance ring onto the unit so that the recess on the distance ring engages the lug on the body of the shaver. This ensures that the distance ring does not twist when you adjust it.

EMPTYING THE LINT COLLECTOR



Slide the lint collector downward and out of the unit. Empty the collector and slide it straight into the unit until it engages audibly.

CLEANING THE LINT REMOVER AND SHAVER HEAD





1. Remove the batteries from the appliance.
2. Remove the distance ring and turn the shaver head counterclockwise to remove it.



3. Brush out residual lint with any small cleaning brush. **CAUTION:** Blades are extremely sharp and can be damaged easily.
4. Reattach the shaver head and fit the distance ring. If necessary, wipe off the unit casing with a slightly dampened cloth.

INSERTING BATTERIES

Open the battery compartment by sliding the mark on the battery compartment lid against the marking arrow on the handle to  and lift it off. Insert the two (2) AA batteries (not included) so that the +/- terminals on each battery match the markings in the battery compartment. Place the battery cover back on and then turn it in the direction of  until it engages audibly.



INSTRUCTIONS FOR USING BATTERIES

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace old batteries of a set at the same time.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- Clean the battery compartment by blowing away any debris prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment that will not be used for an extended period of time.
- When batteries begin to fail, remove promptly.

BATTERY DISPOSAL

Batteries contain various materials that must be recycled and disposed of properly. Do not dispose of in the municipal waste system.

LIMITED ONE YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twelve months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com. To make a warranty claim you must retain your proof of purchase.

battery operated LINT REMOVER



CONAIR®

©2021 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Customer Service Hotline
Australia: 1800 650 263
New Zealand: 0800 266 247
E-mail: aus_info@conair.com
www.conairaustralia.com.au

IB-21/141

CONAIR®

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Model CLS1A